



# 7100R RIM EXIT DEVICE-REVERSIBLE INSTALLATION INSTRUCTIONS LHR door shown , RHR door opposite

10101 ZINS-R7003-00

For steel prepared doors , drill / tap and use supplied machine screws.  
For thin gauge metal , non-prepared doors and wood doors use wood screws.

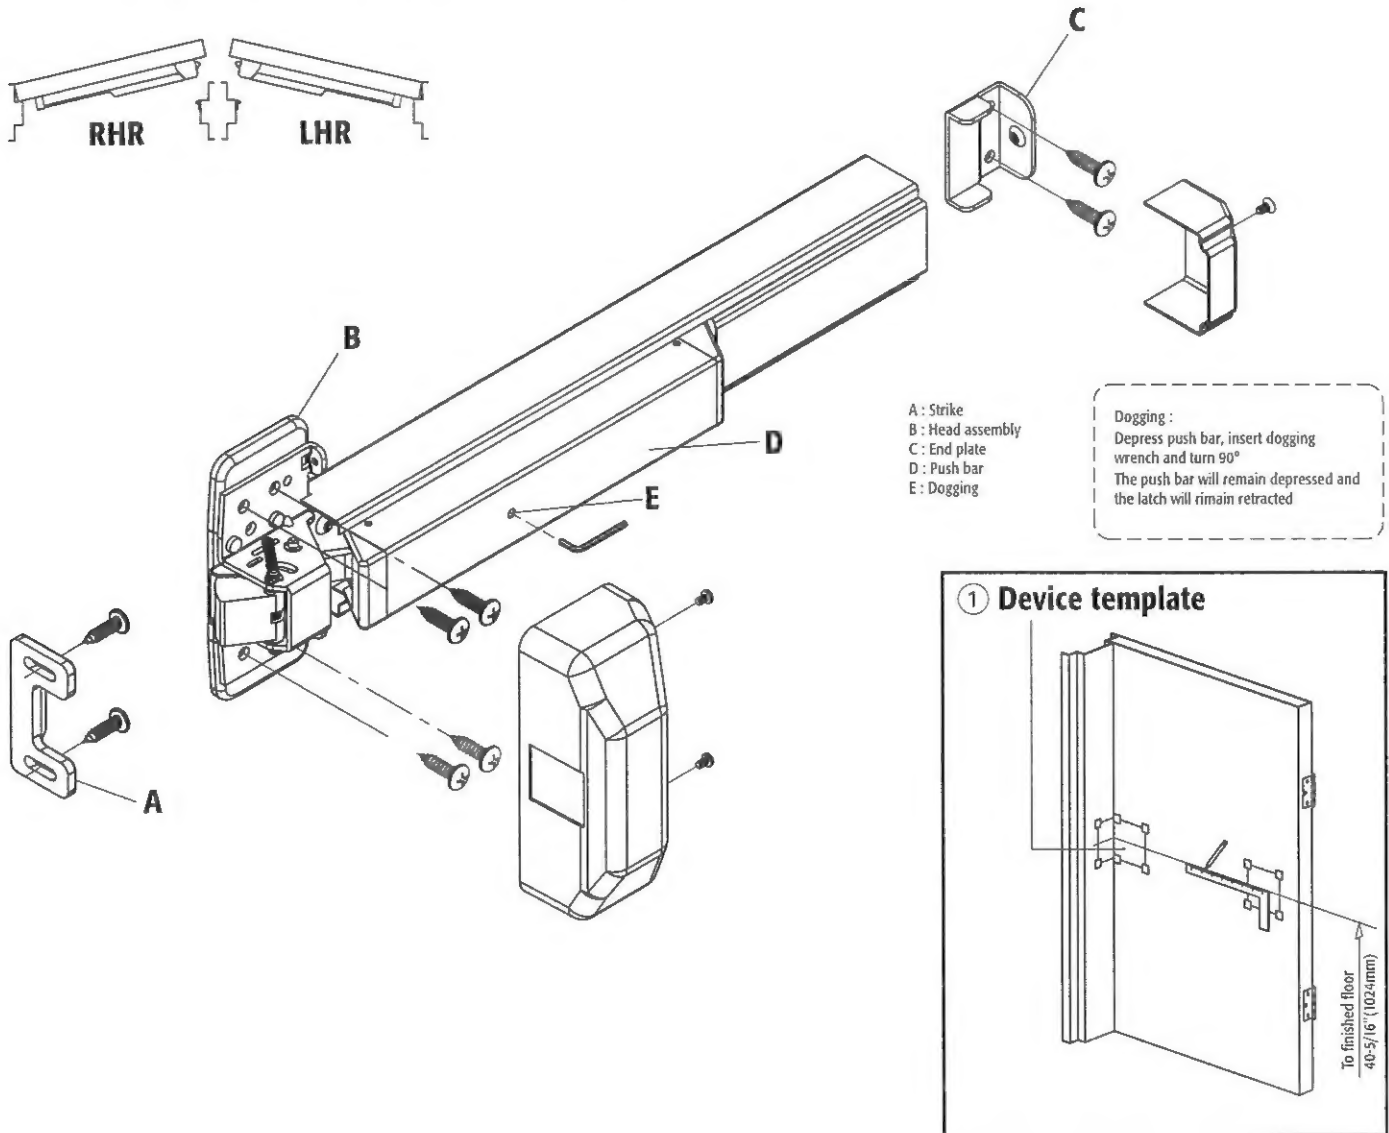


## ② Strike Install

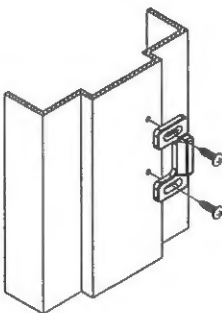


Install the strike to the frame  
with 2 screws as shown

## ③ Head assembly and end plate Install

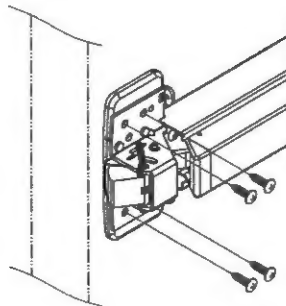

Step 1:  
Install the head assembly to the door with 4 screws as shown

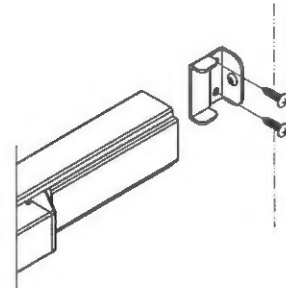

Step 2:  
Install the end plate to the door with 2 screws as shown

7100R Rim Safety Rated Panic Device Template

10101 ZINS-R7004-00

